


ULTRASTAT 21 PROGRAMMING GUIDE



1

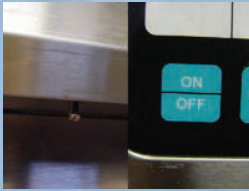

Turn **Toggle ON/OFF** switch to **ON** position and AMBER power indicator lamp will illuminate. Then press **ON/OFF** key.

2




Press **PROG** to enter **PROGRAMMING MODE**. **CODE** will appear in the display. Enter code **1724**, then **ENTER**.

3



Press **PRODUCT KEY #** you wish to program and press **ENTER**. The time for that product key will appear in the display.

4

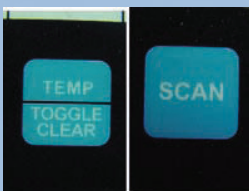

Press **TOGGLE/CLEAR** to clear out old cook time, then put in the new cook time and press **SCAN** to enter additional cook times for this product key, or press **ENTER** to move to the next step.

5



Temperature in °F will appear in the display. Use **TOGGLE/CLEAR** to delete old Temp and enter new one. Press **SCAN** to enter more Temps for this Product Key or press **ENTER** when finished.

6



When finished entering Temps, **FL** or **ST** will be displayed. Press **TOGGLE/CLEAR** to switch between **STRAIGHT** or **FLEX TIME**. Press **SCAN** to advance to next Straight/Flex Time option for that product key and press **ENTER** when finished.

7




To program action alarm times, press **SCAN** to make the display read **PrE**. Press **PRODUCT KEY #** for which you want to program an action alarm, then press **ENTER**.

8



Press **TOGGLE/CLEAR** to erase the current time. Enter desired time and press **ENTER**. Repeat for Alarms 2 and 3.

9

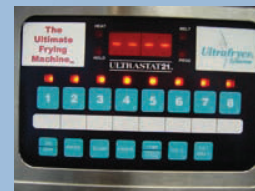

When finished programming your computer press **PROG** to exit **PROGRAMMING MODE**.

Drain Lever