 


# Switches


## All Fryers

- 18185- Micro Switch (Pump/Drain)
- 18A287- Toggle Switch, 3Pole 10AMPS/120V
- 23402- Boot, Toggle Switch Rubber (18A287)

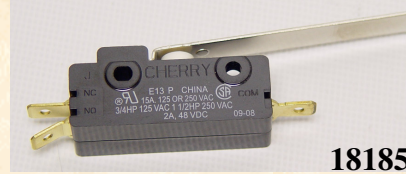

- 12A651- Kit, Retro-Fit On/Off Switch (replaces Red plastic dial switch)

- 18A081- Toggle Switch, 4Pole DPST 15A 125V PNP

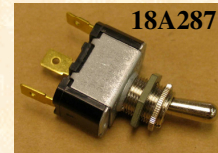


- 23A312- Toggle Switch, Low Profile 2Pole T/R PNP

- 18183- Switch, Air Pressure (GHE)

- 18025- Switch, On/Off 10A L Rated (P/Motor Assy)

- 22A104- Boot, Toggle Switch RED (18025)

- 24A081- Switch, Pressure 1/2" S/S (behind fryer, brwn, green, blue, red leads)

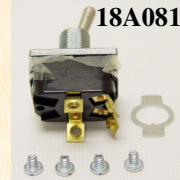

- 23358- Switch, Rocker On/Off w/Red Neon Light, 16AMPm 125V (old P1 & 2)



## PAR 3

- 18A291- Switch, Blower Motor Air (24A281- Fitting, Barb 3/16ID- Switch end)

- (24A182- Fitting, Barb 90Deg 3/16ID-Blower Motor box end)

- 18A060- Switch, Proximity Sensor, drain valve handle sensor, P3



- 18A059- Actuator, Proximity Sensor, wash wand, P3



## Unitop

- 18221- Switch, Electric Timer

- 18011- Switch, Element Head Safety, push button

- 18204- Toggle Switch, SPST 120V

- 18129- Guard, Toggle Switch On/Off (18204)

- 18232- MicroSwitch ( Unitop II)

## Rethermalizer (Chub Warmer)

- 18A004- Float Switch

- 20A018- Gasket, Float Switch

- 18204- Toggle Switch, SPST 120V

- 18129- Guard, Toggle Switch On/Off (18204)



## DTMR

- 18A021- Momentary Start/Exit Melt Button Switch, 2Prong, blk tall push button

- 22A116- Boot, Momentary Switch Rubber (18A021)

- 18A054- Momentary Push Button Switch, 3Prong, blk rnd flush button



## SC Control

- 18A021- Switch, Momentary 120V **Normally Open**

- 18A285- Switch, Momentary 120V .75AMP **Normally Closed**

- 18A054- Momentary Push Button Switch, 3Prong, blk rnd flush button

- 23A153- Terminal, Stakon Female .110

## Batter Carts

- 18204- Toggle Switch, SPST 120V

- 23402- Guard, Toggle Switch On/Off (18204)

