



**14" MODEL EUHE CE ELECTRIC FRYER
WITH HARD DOCK FILTRATION
Operation Instructions**



THIS APPLIANCE IS FOR PROFESSIONAL USE AND IS TO BE USED ONLY BY QUALIFIED PERSONNEL

302 Spencer Lane • P.O. Box 5369

(800) 525-8130 • (210) 731-5000 • Fax: (210) 731-5099

www.ultrafryer.com

San Antonio, Texas 78201

PREFACE

This manual was written and published by the Technical Publications Department, Ultrafryer Systems, for use by personnel who operate an Ultrafryer Model EUHE CE Electric Fryer equipped with an Ultrastat 23 Cooking Computer.

**TECHNICAL PUBLICATIONS DEPARTMENT
ULTRAFRYER SYSTEMS
302 SPENCER LANE
SAN ANTONIO, TX 78201
1-800-545-9189 EXT. 5007**

NOTICE:

This manual is applicable to “Standard” Electric Model EUHE CE Fryer. It can be used as a guide in operating special variations of an Electric Model EUHE CE Fryers.

TABLE OF CONTENTS

COVER PAGE	1
PREFACE	2
TABLE OF CONTENTS.....	3
SAFETY INFORMATION ..	4-7
GENERAL INFORMATION ..	8-10
DESCRIPTION / SPECIFICATIONS	11-15
INSTALLATION, START UP and INITIAL CLEANING	16
Pre -Installation Instructions & Warnings	17-18
Installation	19
Clearance, Ventilation & Electrical Grounding	19
Leveling, Electrical Connection, & Initial Cleaning	20
FRYER START-UP	21
Shortening Installation	22
Computer Panel Key Description	23-24
Computer Programming	25
Fryer Start Up & Cooking	26-27
FILTERING INSTRUCTIONS	28
General	29
Filtering	29
Filter Tub Assembly	30
Shortening Disposal	30
Boiling Out Fryer	31
PREVENTIVE MAINTENANCE & TROUBLESHOOTING	32
Preventive Maintenance	33
Troubleshooting	33
SERVICE AND PARTS	34
Technical Assistance & Parts Ordering Information	35
Parts List	36
WIRING DIAGRAMS	37
Incoming Power	38
Ladder diagram ..	39

SAFTEY INFORMATION

THIS APPLIANCE IS INTENDED FOR PROFESSIONAL USE AND IS TO BE OPERATING BY QUALIFIED PERSONNEL

Throughout this manual NOTICES, CAUTIONS and WARNINGS are used to alert the operator to items of special circumstances and the entire text will be enclosed by a bold border
These items are identified as follows:

NOTICES

These Items will be indented from the main text, the word “NOTICE” will be in capital letters. These items alert the operator to items of special concern to achieve a desired result.

Example:

NOTICE

Pull on the filter tub to ASSURE the male docking plug is SEATED in the female bulkhead socket.

CAUTIONS

These items will be indented from the main body of text, the word “CAUTION” will be in bold, capitalized print. These items identify steps or procedures that if not adhered to could result in product, equipment malfunction or failure.

Example:

CAUTION:



TO ASSURE PRODUCING A QUALITY PRODUCT WHILE PROLONGING THE LIFE EXPECTANCY OF THE FRYER, ENSURE FILTERING, BOIL-OUT AND CLEANING INSTRUCTIONS ARE STRICTLY ADHERED TO.

WARNINGS

These items will be indented from the main body of text, the word “WARNING” as well as the text will be in bold, capitalized print. These items identify steps or procedures that if not adhered to could result in property damage, injury or death.

Example:

WARNING:



DO NOT ALLOW ANY CLEANING SOLUTION OR WATER TO SPLASH INTO A VESSEL OF HOT COOKING OIL, AS IT WILL CONTAMINATE THE OIL AND MAY CAUSE THE OIL TO SPLATTER CAUSING SEVERE BURNS.

DANGERS

These items will be identified from the main body of the text, the word “DANGER” as well as the text will be in bold, capitalized print

Example

DANGER:



DO NOT ALLOW ANY CLEANING SOLUTION OR WATER TO SPLASH INTO A VESSEL OF HOT COOKING OIL, AS IT WILL CONTAMINATE THE OIL AND MAY CAUSE THE OIL TO SPLATTER CAUSING SEVERE BURNS.

IF, DURING THE WARRANTY PERIOD, THE CUSTOMER USES A PART FOR THIS ULTRAFRYER EQUIPMENT OTHER THAN AN UNMODIFIED NEW OR RECYCLED PART PURCHASED DIRECTLY FROM ULTRAFRYER SYSTEMS OR ANY OF ITS AUTHORIZED SERVICE CENTERS, AND/OR THE PART BEING USED IS MODIFIED FROM ITS ORIGINAL CONFIGURATION, THIS WARRANTY WILL BE VOID. FURTHER, ULTRAFRYER SYSTEMS AND ITS AFFILIATES WILL NOT BE LIABLE FOR ANY CLAIMS, DAMAGES, OR EXPENSES INCURRED BY THE CUSTOMER WHICH ARISE DIRECTLY OR INDIRECTLY, IN WHOLE OR IN PART, DUE TO THE INSTALLATION OF ANY MODIFIED PART AND/OR PART RECEIVED FROM AN UNAUTHORIZED SERVICE CENTER.

DANGER:



THE ELECTRICAL POWER SUPPLY FOR THIS APPLIANCE MUST BE THE SAME AS INDICATED ON THE RATING AND SERIAL NUMBER PLATE LOCATED ON THE OUTSIDE OF THE FRYER DOOR

DANGER:



ALL WIRING CONNECTIONS FOR THIS APPLIANCE MUST BE MADE IN ACCORDANCE WITH THE WIRING DIAGRAMS FURNISHED WITH THE EQUIPMENT

DANGER:



DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE

DANGER:



DO NOT ATTACH ACCESSORIES TO THIS FRYER UNLESS FRYER IS SECURED FROM TIPPING. PERSONAL INJURY MAY RESULT

WARNING:



DO NOT USE WATER JETS TO CLEAN THIS EQUIPMENT

WARNING:



THIS EQUIPMENT IS INTENDED FOR INDOOR USE ONLY. DO NOT INSTALL OR OPERATE THIS EQUIPMENT IN OUTDOOR AREAS .

WARNING:



THE FRONT APRON OF THE APPLIANCE IS NOT A STEP! DO NOT STAND ON THE APPLIANCE, SERIOUS INJURY CAN RESULT FROM SLIPS OR CONTACT WITH THE HOT OIL.

WARNING:



THE CRUMB TRAY IN FRYERS EQUIPPED WITH A FILTER SYSTEM MUST BE EMPTIED INTO A FIREPROOF CONTAINER AT THE END OF FRYING OPERATION EACH DAY. SOME FOOD PARTICLES CAN SPONTANEOUSLY COMBUST IF LEFT SOAKING IN CERTAIN SHORTENING MATERIAL.

WARNING:



DO NOT BANG FRY BASKETS OR OTHER UTENSILS ON THE FRYER'S JOINER STRIP (IF APPLICABLE). THE STRIP IS PRESENT TO SEAL THE JOINT BETWEEN THE FRYER VESSELS WHEN ATTACHING 2 FRYERS. BANGING FRY BASKETS ON THE STRIP TO DISLODGE SHORTENING WILL DISTORT THE STRIP, ADVERSELY AFFECTING ITS FIT. IT IS DESIGNED FOR A TIGHT FIT AND SHOULD ONLY BE REMOVED FOR CLEANING.

NOTICE:

Adequate means must be provided to limit the movement of this appliance without depending on or transmitting stress to the electrical conduit. A restraint kit is provided with the fryer or local dealer.

WARNING:



PRIOR TO MOVEMENT, TESTING, MAINTENANCE AND ANY REPAIR ON YOUR ULTRAFRYER, DISCONNECT ALL ELECTRICAL POWER FROM THE FRYER

CAUTION:



NO STRUCTURAL MATERIAL ON THE FRYER SHOULD BE ALTERED OR REMOVED TO ACCOMMODATE PLACEMENT OF THE FRYER UNDER THE HOOD

NOTICE:

This appliance is intended for professional use only and is to be operated by qualified personnel only. A qualified professional should perform installation, maintenance, and repairs. Installation, maintenance, or repairs by unqualified personnel may void the manufacturer's warranty.

NOTICE:

This equipment must be installed in accordance with the appropriate national and local codes of the country and/or region in which the appliance is installed. See NATIONAL CODE REQUIREMENTS of this manual for specifics.

NOTICE:

Drawings and photos used in this manual are intended to illustrate operational, cleaning technical procedures and may not conform to onsite management operational procedures.

DANGER:



IMPROPER INSTALLATION, ADJUSTMENT, MAINTENANCE OR SERVICE AND UNAUTHORIZED ALTERATIONS OR MODIFICATIONS CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND SERVICE INSTRUCTIONS THOUGHLY BEFORE INSTALLING

GENERAL INFORMATION

ULTRAFRYER SERIES ELECTRIC FRYER INTRODUCTION

1.1 General

This manual covers EUHE CE Electric Fryers.

1.2 Safety Information

Before attempting to operate your unit, read the instructions in this manual thoroughly.

Throughout this manual, you will find notations enclosed in bordered boxes similar to the one below.

DANGER:



**HOT COOKING OIL CAUSES SEVERE BURNS.
NEVER ATTEMPT TO MOVE A FRYER CONTAINING HOT OIL OR TO
TRANSFER HOT OIL FROM ONE CONTAINER TO ANOTHER**



CAUTION boxes contain information about actions or conditions that *may cause or result in a malfunction of your system.*



WARNING boxes contain information about actions or conditions that *may cause or result in damage to our system,* and which may cause your system to malfunction.



DANGER boxes contain information about actions or conditions that *may cause or result in injury to personnel,* and which may cause damage to your system and/or cause your system to malfunction.

Fryers in this series are equipped with the following automatic safety features:

1. High-temperature detection features shut off power to the elements should the temperature controls fail.
2. A safety switch built into the drain valve prevents the elements from heating with the drain valve even partially open.

1.3 Controller Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. While this device is a verified Class A device, it has been shown to meet the Class B limits. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If necessary, the user should consult the dealer or an experienced radio and television technician for additional suggestions.

The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4. 1.4 European Community (CE) Specific Information The European Community (CE) has established certain specific standards regarding equipment of this type. Whenever a difference exists between CE and non-CE standards, the information or instructions concerned are identified by means of shadowed boxes similar to the one below.

CE STANDARD

<p>Example of box used to distinguish CE and Non-CE specific information.</p>
--

1.4 Installation, Operating, and Service Personnel

Operating information for Ultrafryer equipment has been prepared for use by qualified and/or authorized personnel only, as defined in Section 1.5. All installation and service on Ultrafryer equipment must be performed by qualified, certified, licensed, and/or authorized installation or service personnel, as defined in Section 1.5

1.5 Definitions

QUALIFIED AND/OR AUTHORIZED OPERATING PERSONNEL

Qualified/authorized operating personnel are those who have carefully read the information in this manual and have familiarized themselves with the equipment functions, or who have had previous experience with the operation of the equipment covered in this manual.

QUALIFIED INSTALLATION PERSONNEL

Qualified installation personnel are individuals, firms, corporations, and/or companies which, either in person or through a representative, are engaged in and are responsible for the installation of electrical appliances. Qualified personnel must be experienced in such work, be familiar with all electrical precautions involved, and have complied with all requirements of applicable national and local codes.

QUALIFIED SERVICE PERSONNEL

Qualified service personnel are those who are familiar with Ultrafryer equipment and who have been authorized by Ultrafryer. to perform service on the equipment. All authorized service personnel are required to be equipped with a complete set of service and parts manuals, and to stock a minimum amount of parts for Ultrafryer equipment. A list of Ultrafryer Factory Authorized Servicicers (FAS's) is located on the Ultrafryer website at www.ultrafryer.com. *Failure to use qualified service personnel will void the Ultrafryer warranty on your equipment.*

SAFETY

The major safety factor associated with the Ultrafryer Model EUHE CE Electric Fryer is burns from hot shortening. In order to prevent serious burns, good housekeeping habits are required. The floor in front of and the area around the fryer should be kept clean and dry. Whenever anything is placed in to a fryer vat, care should be used not to splash the hot shortening. Product should always be “PLACED” into the shortening, not thrown. Safety goggles, neoprene insulated gloves and an apron must be worn while filtering or boiling-out a fryer vat. The Ultrafryer Model EUHE CE Electric Fryer utilizes 230 volts and 208, 220, 240, 380, 400, 415 or 480 volts, single and three phase electrical power and no adjustments or replacement of electrical controls or parts should ever be attempted without first disconnecting ALL electrical power. FAILURE to do so could result in serious electrical shock or death. Electrical power to the fryer is supplied from more than one (1) circuit breaker and it should be determined that ALL electrical power has been removed prior to beginning a repair. The fryer and its controls should not be operated with wet hands or while standing in water. To do so can result in serious electrical shock or death.

Fire in liquid shortening should always be a constant concern of team members operating or working nearby the Electric Fryer. The fryer should be equipped with a Fire Suppression system, that automatically OPENS the shunt trip circuit breakers, removing electrical power from the fryer if a fire occurs. In addition, this system MUST be inspected by a licensed distributor each six (6) months to assure it is operational.

DESCRIPTION/SPECIFICATIONS

The Ultrafryer Model EUHE CE Electric Fryer is constructed from 16 and 18 gauge, type 304 polished satin finished stainless steel. Model EUHECE Electric Fryers are equipped with an Ultrastat Model 23 Cooking Computer. In addition, the Model EUHE CE Electric Fryer has a shortening Filtration system that uses a Permafil Stainless Steel Filter Screen. The customer has the option of ordering a Magnepad / Gycor Filter System that uses a Paper Filter Pad in lieu, of a S/S filter screen. The dimensions of each size fryer is as follows:

ITEM DESCRIPTION	EUHE-14	
	In. (mm)	
Overall Width	15 5/8"	(397)
Overall Depth	32 7/8"	(835)
Work Height	36"	(914)
Oil Capacity		
High Level		----
Low Level	45 lbs	(22.5 liters)


NOTICE

Test Start-Up, Operation, Cooking, Filtering and Boil-Out Prodedures of a Model EUHE CE Electric Fryer in this manual are based on the Ultrastat 23 Cooking Computer Procedures. Refer to Manual Instruction to form these functions in a fryer equipped with this control

**POWER REQUIREMENTS
TABLE**


MODEL	VOLTS Rated	VOLTS Applied	#WIRES	MIN WIRE SIZE		KW 2 ELEM	AMPS per leg
				AWG	MM		
EUHE 14 CE 15KW	208	208	3	6	4.11	15KW	42
		240	3	6	4.11	20KW	48.5
		220/380	4	6	4.11	16.7KW	25.5
		230/400	4	6	4.11	18.5KW	26.9
		240/415	4	6	4.11	19.9KW	27.9
		480	3	8	2.59	26.6KW	32.3
EUHE 14 CE	240	208	3	6	4.11	11.3KW	31.4
		240	3	6	4.11	15.0KW	36.1
		220/380	4	6	4.11	12.5KW	19
		230/400	4	6	4.11	13.9KW	20.1
		240/415	4	6	4.11	15.0KW	20.8
		480	3	8	2.59	20.0KW	24.1

FRYER PARTS IDENTIFICATION

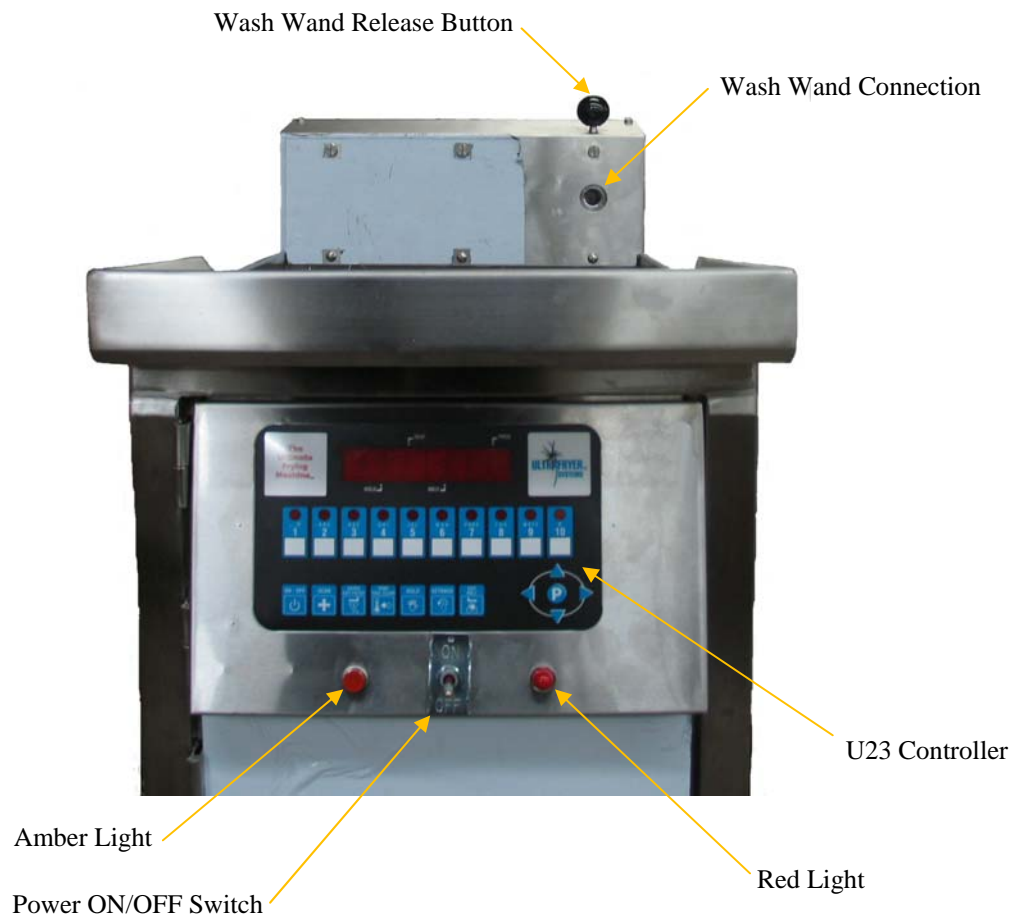


FRONT VIEW OF CONTROLLER DOOR

FRYER PARTS IDENTIFICATION

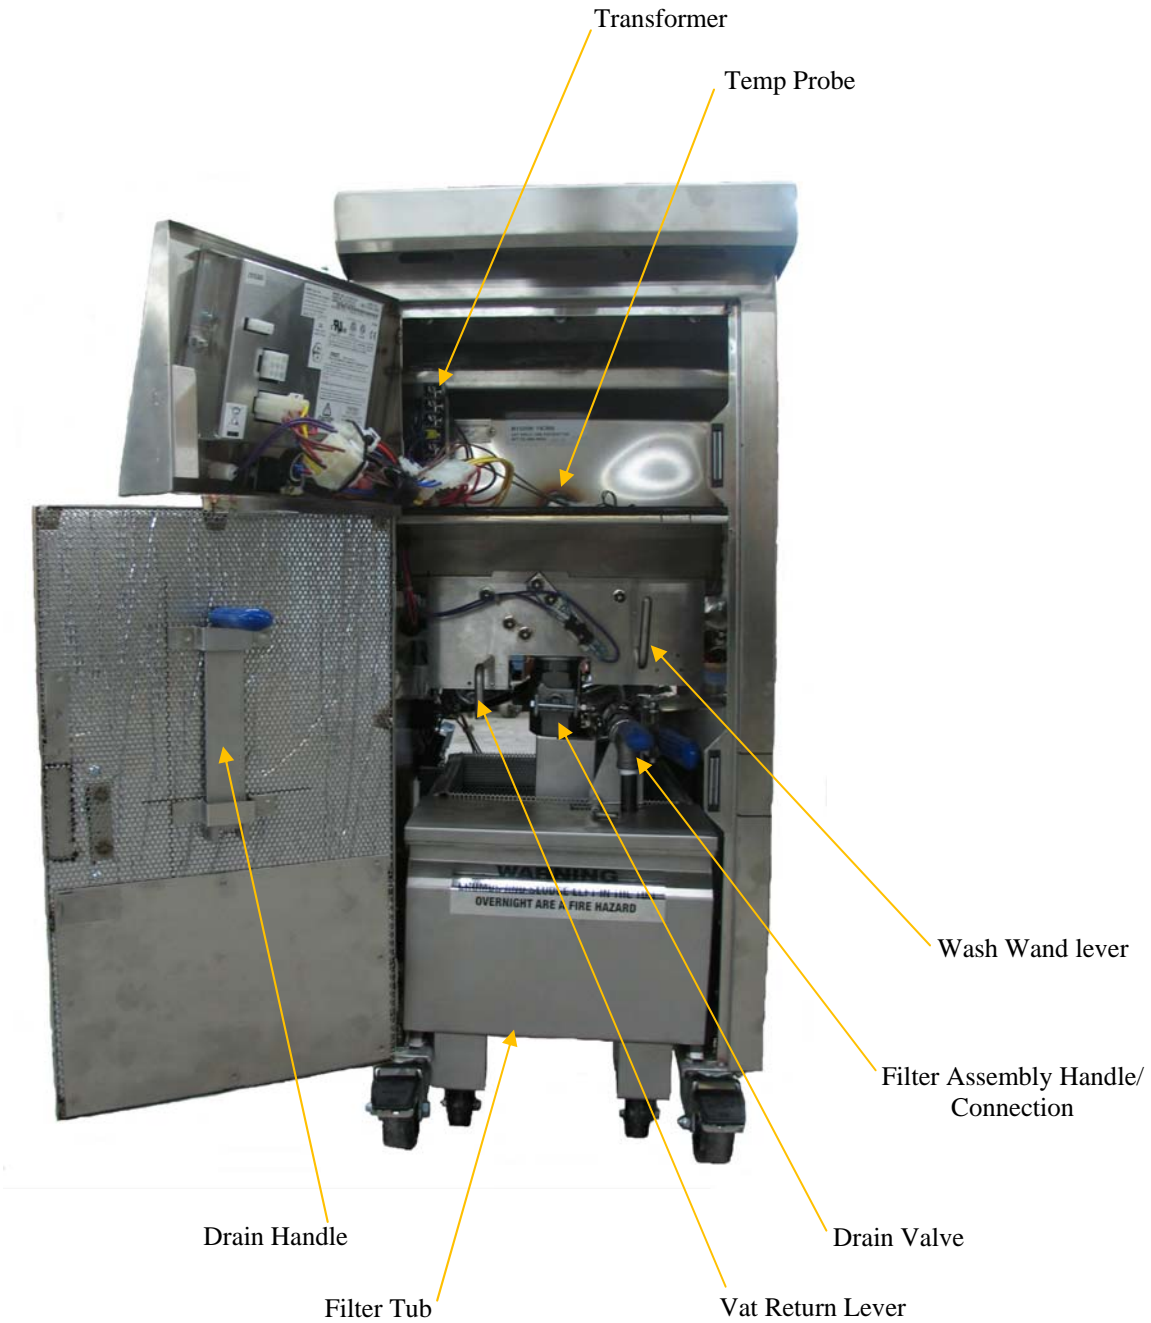

**FRONT VIEW OF FRYER
DOORS OPEN**

FRYER PARTS IDENTIFICATION

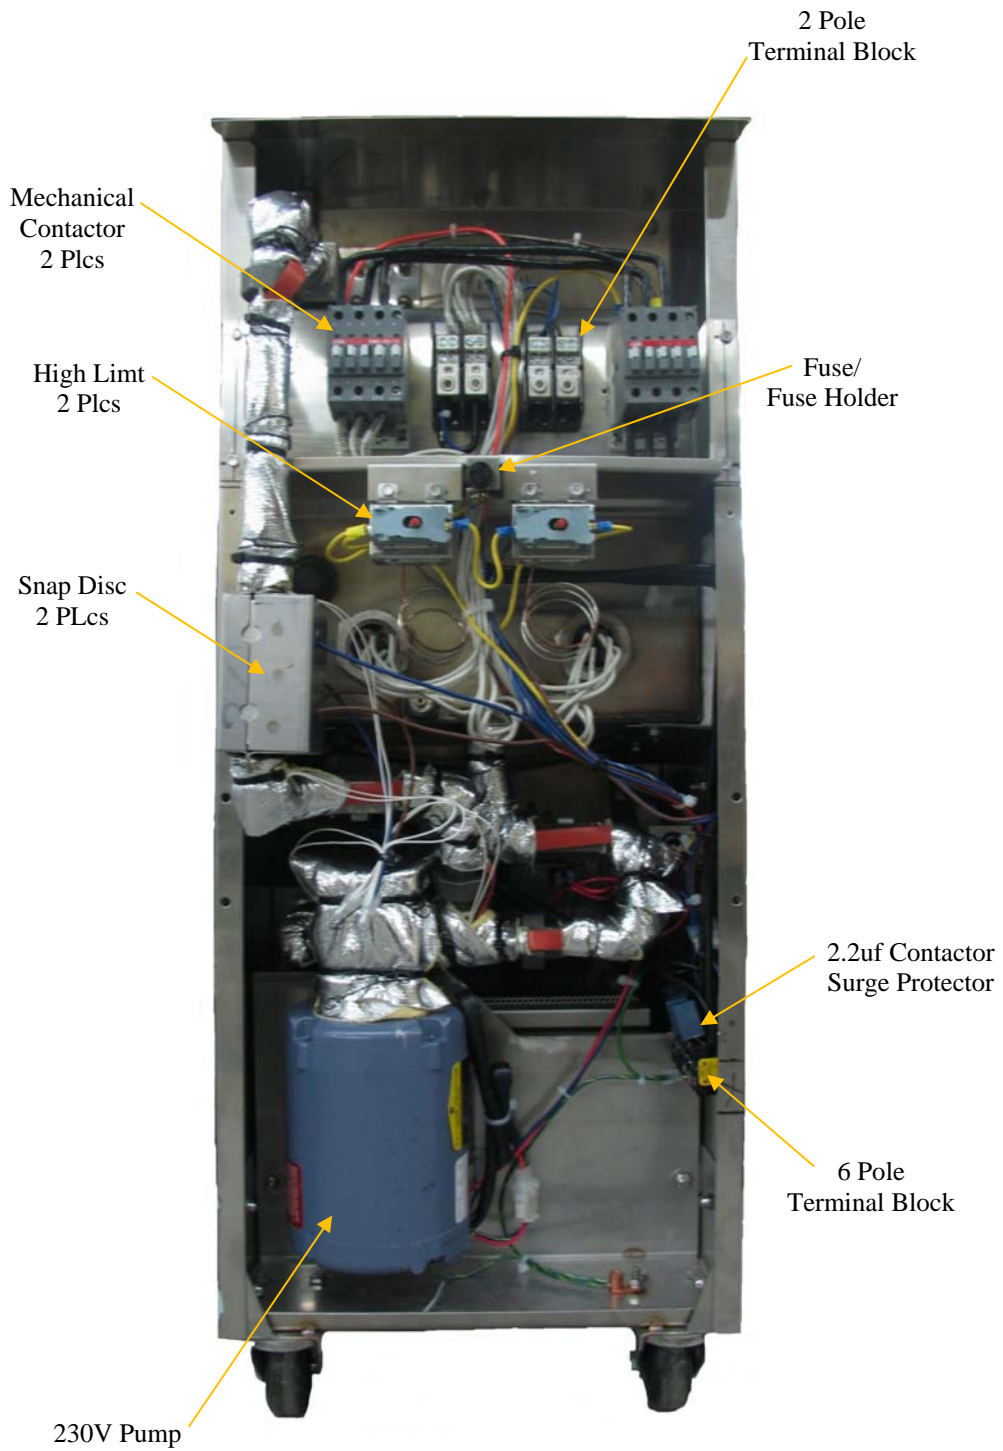

REAR VIEW OF FRYER

INSTALLATION, STARTUP, AND INITIAL CLEANING

NOTICE:

All installation and service on Ultrafryer equipment must be performed By qualified, licensed, licensed, and/or authorized installation or service personnel. qualified personnel must be experienced in such work, be familiar with all electrical precautions involved, and have complied with all requirements of applicable national and local codes.

PRE-ELECTRIC FRYER INSTALLATION INSTRUCTIONS

General

Proper installation is essential for the safe, efficient, trouble-free operation of this appliance.

Qualified, licensed, and/or authorized installation or service personnel, as defined in Section of this manual, should perform all installation and service on Ultrafryer equipment.

Failure to use qualified, licensed, and/or authorized installation or service personnel (as defined in Section of this manual) to install or otherwise service this equipment will void the Ultrafryer warranty and may result in damage to the equipment or injury to personnel.

Where conflicts exist between instructions and information in this manual and local or national codes or regulations, installation and operation shall comply with the codes or regulations in force in the country in which the equipment is installed.

Service may be obtained by contacting your local Factory Authorized Servicer.

NOTICE:

All fryers shipped without factory supplied cords and plug assemblies must be hardwired using flexible conduit to the terminal block located on the rear of the fryer. These fryers should be wired to NEC specifications. Hardwired units must include installation of restraint

NOTICE:

If this equipment is wired directly into the electrical power supply, a means for disconnection from the supply having a contact separation of at least 3-mm in all poles must be incorporated in the fixed wiring.

NOTICE:

This equipment must be positioned so that the plug is accessible unless other means for disconnection from the power supply (e.g., a circuit breaker) is provided.

NOTICE:

If the electrical power supply cord is damaged, it must be replaced by a Ultrafryer Factory Authorized Servicer or a similarly qualified person in order to avoid a hazard.

NOTICE:

If this appliance is permanently connected to fixed wiring, it must be connected by means of copper wires having a temperature rating of not less than 167°F (75°C).

DANGER:



THIS APPLIANCE MUST BE CONNECTED TO A POWER SUPPLY HAVING THE SAME VOLTAGE AND PHASE AS SPECIFIED ON THE RATING PLATE LOCATE ON THE INSIDE OF THE APPLIANCE DOOR

DANGER:



ALL WIRING CONNECTIONS FOR THIS APPLIANCE MUST BE MADE IN ACCORDANCE WITH THE WIRING DIAGRAM(S) FURNISHED WITH THE APPLIANCE. REFER TO THE WIRING DIAGRAM(S) AFFIXED TO THE INSIDE OF THE APPLIANCE DOOR WHEN INSTALLING OR SERVICING THE EQUIPMENT.

Positioning the Fryer

DANGER:



NO STRUCTIAL MATERIAL ON THE FRYER SHOULD BE ALTERED OR REMOVED TO ACCOMMODATE PLACEMENT ON THE FRYER UNDER A HOOD. QUESTIONS? CALL THE ULTRAFRYER SERVICE HOTLINE AT 1-800-525-8130.

INSTALLATION

GENERAL - Each Model EUHE CE Electrical Fryer should be installed as follows:

1. Properly unpacked and positioned at its operating location within the store.
2. Placed beneath a properly designed exhaust hood and protected by a Fire Suppression System
3. **LEVELED** using a spirit level to assure each vat contains the proper amount of shortening.
4. Installed by a licensed electrician and connected to the 1 phase and 3 phase voltages shown on the data plate.
5. Restrained by use of a restraining device to avoid splashing hot liquid and to ensure tension cannot be placed on electrical connections.

WARNING:



UNPACKING—CHECK THAT THE CONTAINER IS UPRIGHT. USE AN OUTWARD PRYING MOTION “DO NOT USE A HAMMER” TO REMOVE THE WOOD BRACES AND CARTON. CHECK THE FRYER BANK FOR VISIBLE DAMAGE; IF DAMAGE HAS OCCURRED DO NOT REFUSE SHIPMENT, BUT CONTACT THE CARRIER AND FILE THE APPROPRIATE FREIGHT CLAIMS. REMOVE THE TWO SHIPPING BOLTS IN THE FRONT AND REAR LEGS AND REMOVE THE TWO 2” X 6” (51mm x 152mm) WOOD SUPPORTS

INSTALLING -

In the event of a power failure, the fryer(s) will automatically shut down. If this occurs, turn the power switch OFF. Do not attempt to start the fryer(s) until power is restored.

CLEARANCE AND VENTILATION

This appliance must be kept free and clear of combustible material.

A clearance of 6 inches (15cm) must be provided at both sides and back adjacent to combustible construction. A minimum of 24 inches (61cm) should be provided at the front of the equipment for servicing and proper operation.

WARNING:



DO NOT BLOCK THE AREA AT THE BASE OR UNDER THE FRYERS.

ELECTRICAL GROUNDING REQUIREMENTS

All electrically operated appliances must be grounded in accordance with all applicable national and local codes, and, where applicable, CE codes. All units (cord connected or permanently connected) should be connected to a grounded power supply system. A wiring diagram is located on the inside of the fryer door. Refer to the rating plate on the inside of the fryer door for proper voltages.

AUSTRALIAN REQUIREMENTS

To be installed in accordance with AS 5601 / AG 601, local authority, gas, electricity, and any other relevant statutory regulations.

LEVELING

After the Ultra Fryer Electric Fryer has been properly positioned in the store, it should be LEVELED using a Spirit Level by inserting the appropriate number of shim plates between each leg and caster plate. Leveling will assure that each vat contains the same amount of shortening when checked at the engraved shortening level mark on the rear wall of the fryer vat.

NOTICE:

A caster may not return to the same position after being moved, which requires a re-leveling after each movement

ELECTRICAL CONNECTION

Each Model EU Electric Fryer is wired internally to operate on 230 volt single phase and 380 or 415 volt 3 phase electrical power as shown on the fryer's rating plate. The 230 volt control circuit of each individual fryer in a bank of fryers are internally wired in parallel to an eight (8) foot 230 volt electrical cord with a molded electrical plug. The 380 or 415 volt 3 phase circuit of each fryer in a bank of fryers is internally wired to a SEPARATE terminal block which is to be used to connect to the building power source. It is ESSENTIAL that the 230 volt electrical receptacle is located within 8 feet of the fryer bank location and that provisions are made so that the fryer bank can be moved to service fryers from the rear. Electrical connections to the fryer bank should be made by a licensed electrician, and they must conform to all local electrical codes and/or ordinances. To avoid electrical hazards and assure proper operation of the electric fryer, the following precautions should be observed during installation:

- A. MATCH VOLTAGE: Before connecting electrical power, insure the line voltage matches the voltage rating on the fryer's data plate.
- B. CIRCUIT BREAKERS: The fryer must be connected to a circuit having shunt-trip circuit breakers sized in accordance with requirements of all local electrical codes and ordinances.
- C. GROUNDING: The fryer MUST be grounded to the building ground system according to local electrical codes and ordinances.
- D. FIRE PROTECTION: The fryer should be installed beneath a powered exhaust hood which complies with local electrical codes and ordinances and which is equipped with an approved Fire Suppression System designed to automatically shut off all sources of electrical power to the fryer in case of a vat fire.
- E. CLEARANCES - The Model EUF Electric Fryer MUST be kept free and clear of all combustibles. The MINIMUM clearances from combustible and non-combustible construction is 6" (152 mm) from the sides and 6" (152 mm) from the rear of the fryer. The fryer may be installed on combustible floors.

INITIAL CLEANING

New Electric Fryers are wiped clean with solvents at the factory to remove any visible signs of dirt, oil, grease, etc. remaining from the manufacturing process; then given a light coat of oil. Each fryer and filter tub assembly should be THOROUGHLY washed with HOT sanitizer solution to remove film residue, installation dust or debris and then wiped dry prior to placing the fryer into operation.

FRYER START-UP

SHORTENING INSTALLATION

A. LIQUID SHORTENING:

When using liquid shortening (cooking oil) fill the fryer with shortening to the bend line between the words “MIN and MAX” on the rear wall of the fryer vat.

B. SOLID SHORTENING:

1. Cut a block of solid shortening into small pieces.
2. Place small pieces of solid shortening EVENLY on top of the HEAT MECHANISM or THOROUGHLY PACK these pieces of solid shortening between, below and above the HEAT MECHANISM. While packing solid shortening is messy and time consuming, it is the safest and fastest way to melt solid shortening.
3. Ultrastat 23 equipped Fryer
 - A. Turn the fryer Toggle ON/OFF switch ON; then place the computer in the SHORTENING MELT MODE by depressing the ON/OFF button. The MELT lamp will LIGHT to indicate the computer is in the SHORTENING MELT MODE; and the HEAT lamp and RED heat mechanism indicator lamp on the fryer will cycle ON and OFF indicating the heat mechanism is periodically being turned ON and OFF to gently heat the shortening.
 - B. When the heat mechanism is COMPLETELY covered with LIQUID shortening and the shortening is ABOVE the Melt Limit Temperature, replace the grill in the fryer vat; then push the EXIT MELT button on the computer. Proceed to Paragraph B 5) below.
4. Continue adding solid shortening as follows:
 - A. Place small pieces of solid shortening into a fry basket.
 - B. CAREFULLY lower the basket into the fryer vat.
 - C. GENTLY turn the basket to allow these pieces of solid shortening to float away.
 - D. Repeat the above steps until liquid shortening is to the bend line between the words “MIN and MAX” on the rear wall of the fryer vat.

WARNING:




- | |
|--|
| <p>I DO NOT MOVE A FRYER FILLED WITH HOT LIQUID.</p> <p>II ALWAYS WEAR OIL-PROOF, INSULATED GLOVES WHEN WORKING WITH A FRYER FILLED WITH HOT OIL.</p> <p>III ALWAYS DRAIN HOT OIL INTO A METAL TUB, POT OR CAN ... HOT OIL CAN MELT PLASTIC BUCKETS OR SHATTER GLASS.</p> |
|--|

COMPUTER PANEL KEY DESCRIPTIONS


1. HOLD LAMP
When lit (bright) indicates a product hold time is being tracked.
2. HEAT LAMP
When lit (bright) indicates the computer is calling for heat.
3. DISPLAY
Displays modes, functions and operations of the computer.
4. MELT LAMP
When lit (bright) indicates the computer is in the melt cycle.
5. PROGRAM LAMP
When lit (bright) indicates the computer is in the program mode.
6. ON/OFF KEY
Turns the computer ON and OFF when the fryer power switch is in the ON position and the drain valve lever is in the closed UP position.
7. PROGRAM KEY
 - a. In “operating” mode, allows access to the programming mode.
 - b. In “programming” mode, allows access to the operating mode and general navigation function.
8. SCAN KEY
 - a. In “operating” mode, displays the remaining cook time on every product currently in a cook cycle and lights the respective products “LED” for 2 seconds.
 - b. In “programming” mode, steps to the next function to be programmed.
9. ENTER EXIT FILTER KEY
This key will force a filter the fryer into the filter mode. This key is an optional feature.
10. TEMP/TOGGLE CLEAR KEY
 - a. In “operating” mode, displays the actual temperature followed by the programmed “set” temperature.
 - b. In “programming” mode, allows the user to “toggle” (switch) between choices in an entry field and “clear” values from a data field.
11. HOLD KEY
 - a. In “operating” mode, used to view remaining hold times.
12. SET BACK
 - a. In operating mode forces setback . Display will show “setback” and appliance will be controlled to **set-back** temperature instead of **set point** temperature.
13. EXIT/MELT KEY
 - a. In “operating” mode, used to manually exit the shortening melt cycle.
 - b. In “programming” mode, used to enter numerical value 0.
14. PRODUCT LED
 - a. When lit (bright) in the “operating” mode, identifies the product data being displayed.
 - b. When lit (bright) in the “programming” mode, identifies the product being programmed.
15. PROGRAMMING AND PRODUCT COOK KEY
 - a. In “operating” mode, used to start and stop a product’s cook cycle.
 - b. In “programming” mode, used to enter numerical values 1 to 10.


COMPUTER PANEL KEY DESCRIPTIONS

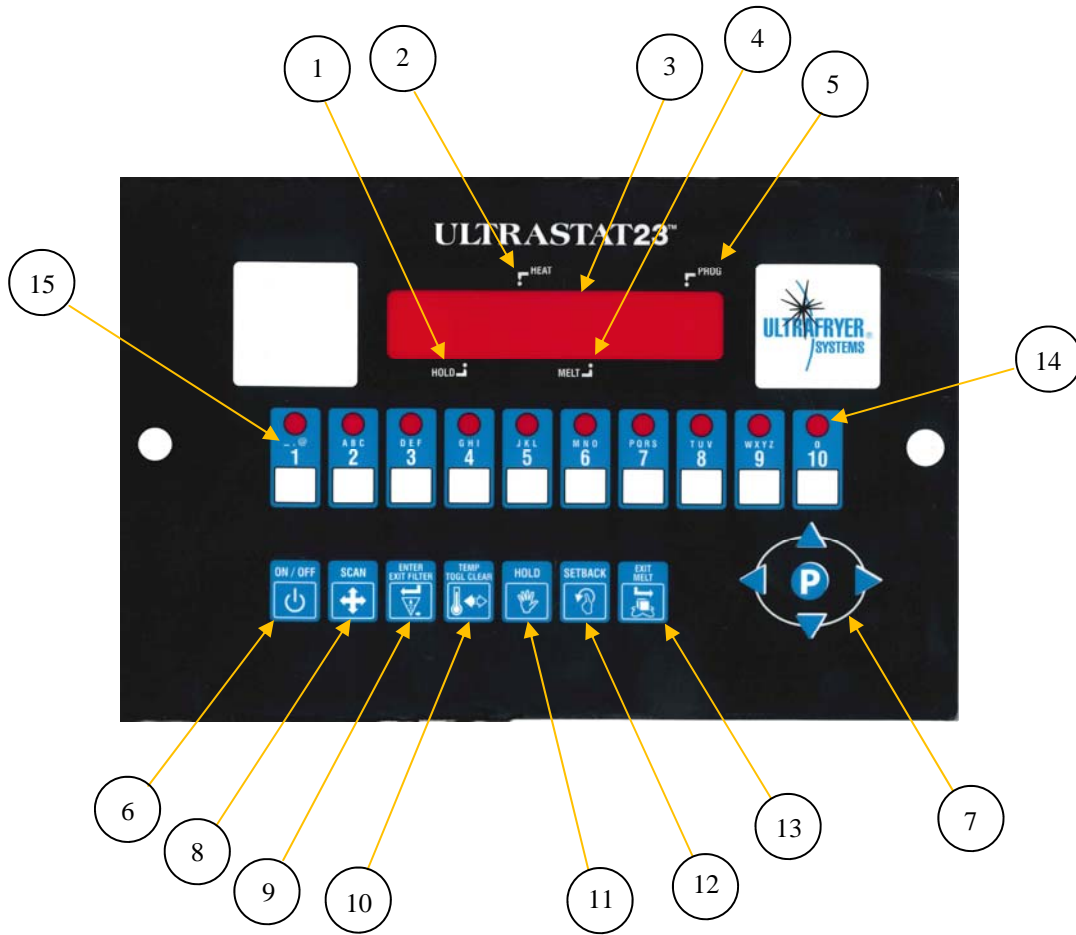



Ultrastat 23 Programming Guide


- 1** Turn Toggle ON/OFF switch to ON position and amber power indicator lamp will illuminate. Then press power ON/OFF key.



- 2** Push and hold the "P" key for 3 seconds to enter PROGRAMMING MODE. PROGRAM will appear in display.

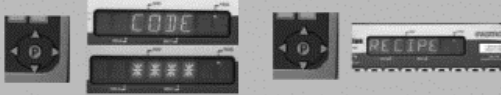

- 3** Push "P" key the second time to display CODE. Enter "1724" and push the "P" key. RECIPE will display.

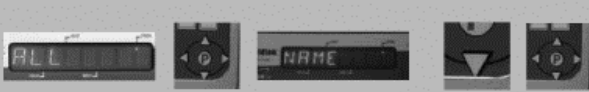

- 4** Push "P" key and "PRODUCT" will display. Hit product key you want to program and hit "P" key.



- 5** Display shows "ALL". Push "P" key to program each function and "NAME" appears. To change hit the "DOWN ARROW" and scroll to find the word you want in the library. Then push the "P" key to enter it and go to the next item.



- 6** "TIME 1" will display. To change the time hit "TOGGLE CLEAR" index the time you want on the number pad and press the "P" key to save.



- 7** "TEMP 1" will display. To change hit "TOGGLE CLEAR" and key in the amount you want and hit the "P" key.



- 8** "FLEX" or "STRAIGHT" time will appear. To change from one to the other, hit the left arrow key. Then hit the "P" key to save it.



- 9** Display shows "TIME 2". Repeat steps 6, 7, and 8 for each profile. After the last profile, display will show "ALARM TIME 1".


- 10** To change "ALARM TIME 1" hit "TOGGLE CLEAR" and index what you want on the number keys and hit the "P" key and the display will show "ALARM NAME".


- 11** To change "ALARM NAME" hit "DOWN ARROW" and scroll until you find the name you want. Then hit the "P" key. Repeat for alarm 2 and 3 if applicable.


- 12** Display will show "HOLD TIME 1". For most applications this is not used so exit at this point. To exit press the "DOWN ARROW" key repeatedly until "EXIT" shows on the display. Then hit the "P" key. "PRODUCT" will show on the display.


- 13** Then hit the "UP ARROW" key and display will show "EXIT". Hit the "P" key and display shows "RECIPE". Hit the "UP ARROW" again then hit "P" key and "PREHEAT" or "READY" should appear. You are now out of program mode and ready to operate with the latest changes.



ULTRASTAT 23 START-UP AND COOKING COMPUTER OPERATION

NOTICE:

- 1) The computer will keep the fryer in the MELT CYCLE until the EXIT MELT button is manually depressed.
- 2) The computer CANNOT be taken out of the SHORTENING MELT MODE until the shortening temperature reaches the MELT LIMIT TEMPERATURE. The Melt Limit Temperature is factory set for a HIGH exit temperature (135°F / 57°C) or a LOW exit temperature (100°F/38°C).

The following are abbreviated operating procedures for a fryer equipped with an Ultrastat 23 Cooking Computer. The attached Ultrastat 23 Ultrafryer Computer Operating Instructions, Manual PN 30A216, contains DETAILED Operating, Filtering, Boil-Out and Programming Instructions.

START-UP and COOKING

ULTRASTAT 23 START-UP - Safely start-up an electric fryer equipped with an Ultrastat 23 Cooking computer as follows:

<u>STEP</u>	<u>ACTION</u>	<u>RESPONSE</u>
1	ENSURE the drain valve lever on the fryer is in the CLOSED position, shortening is at the proper level, then turn the fryer ON/OFF switch to the on position.	A. The AMBER Power lamp beside the ON/OFF switch will LIGHT. B. The heating elements will power up and begin to heat the shortening.

CAUTION:



PRIOR TO PROCEEDING TO NEXT STEP, VISUALLY CHECK THAT THE HEATING ELEMENTS ARE COVERED WITH AT LEAST 2" (51mm) OF SHORTENING

2	Turn the Computer ON by depressing the computer ON/OFF button.	A. The MELT lamp will LIGHT to indicate the computer is in the SHORTENING MELT MODE. B. The HEAT lamp on the computer and the RED heat mechanism indicator lamp on the fryer will cycle ON and OFF indicating the heat mechanism is periodically being turned ON and OFF to gently heat the shortening.
3	Once the Melt Limit Temperature is reached depress the EXIT MELT BUTTON on the computer to cancel the SHORTENING MELT MODE.	A. LO will appear in the computer display indicating shortening temperature is more than 10°F (5°C) below the set-point temperature. B. The HEAT lamp on the computer and the RED heat mechanism indicator lamp will remain ON until the set-point temperature is reached.
4	When "Ready" appears in the Computer display indicating the SET-POINT TEMPERATURE of the shortening has been reached, a COOK cycle can be initiated.	A. Stir the shortening several times to ensure that all the shortening has reached the set point temperature.

NOTICE:

Startup steps 1, 2, 3, and 4 will have to be repeated each time any of the following occurs:
DRAIN VALVE IS OPEN. FRYER TOGGLE ON/OFF SWITCH IS TURNED OFF TO FILTER SHORTENING OR BOIL-OUT A FRYER. FRYER TOGGLE ON/OFF SWITCH IS TURNED OFF AT CLOSING OR ANY OTHER REASON.

ULTRASTAT 23 COOKING COMPUTER PROGRAMMING

Program the Ultrastat 23 Cooking Computer according to the, Computer Operating Instructions Manual, (PN 30A216) provided with the Fryer.

NOTICE:

Programming of an Ultrastat 23 Cooking Computer should only be performed by a store manager or area supervisor

GENERAL COOKING

Most products should be cooked with a shortening temperature about 350°F (177°C); however, each product should be cooked at the **LOWEST** temperature that produces a high quality product while obtaining maximum usage of the shortening.

WARNING:



- I – DO USE A HIGH QUALITY SHORTENING TO ACHIEVE A CONSISTENT QUALITY PRODUCT AND LONG TERM SAVINGS**
- II – DO NOT SALT PRODUCTS OVER THE FRYER AS SALT QUICKLY DETERIORATES THE SHORTENING AND FLAVORS OTHER PRODUCTS COOKED IN THE SAME SHORTENING**
- III – DO FILTER SHORTENING AFTER THE LUNCH AND DINNER RUSH AND MORE OFTEN IN A HIGH SALE VOLUME STORE; AND BOIL-OUT THE FRY-**

When the Computer is taken out of the **SHORTENING MELT MODE** each morning, shortening in the fryer vat will be heated to its **SETPOINT** temperature **HEATING** will appear in the display to indicate the shortening temperature is **MORE** than 20°F (-6.6°C) **BELOW** the set point temperature. When shortening temperature rises to the **SETPOINT** temperature, **“READY”** will appear in the display indicating a **COOK CYCLE** can be started.


STARTING A COOK CYCLE

To start a cook cycle simply press the product key for the product you wish to cook. If the product is programmed, the correctly cooking time will be displayed **“3:00”** (example) and this time will immediately start to count down in minutes and seconds. If correctly programmed, it will count down to **“ :00”** followed by a beeping signal. To turn this signal **OFF** and reset the Computer, press the same product key used to start the **COOK CYCLE**.

CANCELLING A COOK CYCLE

If a cook cycle was inadvertently started it may be cancelled two (2) ways:

- 1) Press and hold the same product key used to start the cook cycle for 4 **SECONDS**. This prevents an accidental start of a cook cycle while a product is being cooked.
- 2) A cook cycle can be **CANCELLED** at any time by turning the fryer **ON/OFF** Switch to the **OFF** position.

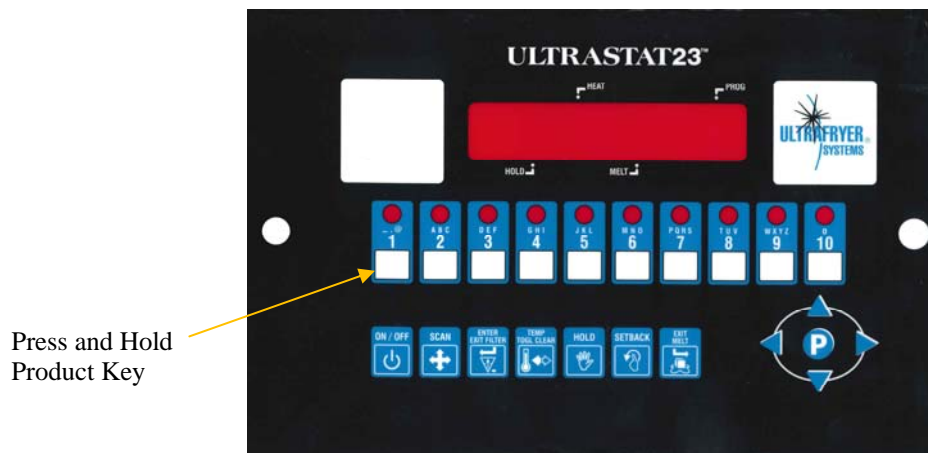

FILTERING INSTRUCTIONS

GENERAL

The Model EUHE CE Electric Fryer is equipped with a Filter Tub Caddy located beneath the vat inside of the fryer cabinet.

FILTERING

Refer to “HE” Type Filtration Procedures Manual p/n 30A233 for operating instructions

1) FILTER SCREEN/ PAPER ENVELOPE

Before filtering place the amount of FILTER AGENT into the fryer vat as prescribed in the cleaning manual provided by you chemical supplier, thoroughly stir the filter agent into the shortening using a skimmer, then skim the shortening to remove any floating crumbs

2) MAGNEPAD/ GYCOR PAD

WARNING:



**DO NOT ADD ANY FILTER AGENT OR SLURRY MIX
TO THE MAGNEPAD OR GYCOR PAD OR VAT**

When using MAGNEPAD / GYCOR PAD, the following should be followed to obtain optimum performance

CIRCULATE THE SHORTENING FOR NO MORE THAN FIVE (5) MINUTES

The filter pads are designed to be circulates for a maximum of 5 minutes. Circulating any longer causes the shortening to aerate which in turn leads to smoking and circulating less than 3 minutes does not allow the pad to chemically cleanse the shortening. It is important to circulate the shortening at least ionce or twice per day, however, it is not necessary to circulate the shortening on every filtration during the day

ASSEMBLE FILTER TUB WITH THE FILTER PAD THE DAY OF FILTRATION

Since the pads are very absorbent, and their effectiveness is reduced if they are exposed to moisture, **DO NOT** put them in a wet filter tub or leave them in a pre-assembled filter tub overnight. It is best to store the pads in a clean dry area and assemble them in a clean dry filter tub the day of the filtration,

FILTER TUB ASSEMBLY

The Model EUHE Filter Tub Assembly consist of a “Micro-Mesh Stainless Steel Filter” or a “Magnepad Paper Envelope Filter” or a “Gycor Pad”; and a Filter Tub, Filter Tub Cover , Crumb Catcher and a Standpipe / Docking Assembly

Assemble a clean Filter Screen as follows:

1. “Micro-Mesh” Stainless Steel Filter Screen
 - a. Insert the SUCTION FITTING on the BAFFLE in the hole of the UPPER FILTER SCREEN; then place these items on top of the LOWER FILTER SCREEN.
 - b. ENSURE all sides of the FILTER SCREEN assembly are aligned, place the PIN end of FRAME on the FILTER SCREENS, place the CHANNEL on the frame adjacent to the PIN end over the FILTER SCREENS; then HINGE the frame so the edge of the FILTER SCREENS are inserted in the other CHANNEL of FRAME.
 - c. Place the PIN end of FRAME on the FILTER SCREENS so the PIN is seated in the CHANNEL of FRAME near the FINGER LOOP, place the CHANNEL on the frame adjacent to the PIN end over the edge of the FILTER SCREENS; then HINGE the frame so the edge of the FILTER SCREENS are inserted in the other CHANNEL of FRAME and the PIN of FRAME is seated in the CHANNEL of FRAME.
 - d. Adjust FRAMES so both PINS are properly seated in the CHANNEL of the opposite frame; then CAREFULLY connect the KNURL KNOB attached to the STANDPIPE to the SUCTION FITTING on the FILTER SCREEN assembly.

2. “Magnapad”/ Paper Envelope” / “Gycor Pad” Filter
 - a. Insert the BAFFLE into the FILTER PAD/ ENVELOPE, when inserted properly the SUCTION FITTING will protrude through the hole in the pad.
 - b. Fold FLAP over (in the direction of the hole), securing the Baffle inside the FILTER PAD ENVELOPE.
 - c. CAREFULLY, align the CLIP & STANDPIPE ASSEMBLY so that the CLIP can secure the FLAP on the Envelope and the STANDPIPE will align over the SUCTION FITTING protruding through the Envelope.
 - d. Tighten the Knurled NUT on the STANDPIPE on the SUCTION FITTING protruding through the Envelope.

SHORTENING DISPOSAL

Dispose of shortening per company procedures

Refer to “HE” Type Filtration Procedures Manual p/n 30A233 for operating instructions

WARNING:

<p>WATCH FOR RECOILING WASH WAND HOSE WHEN PUMPING SHORTENING THROUGH HOSE</p>

FRYER BOIL-OUT

BOIL-OUT each fryer following cleaning instructions contained in the Cleaning Manual provided by your approved chemical supplier.

Refer to "HE" Type Filtration Procedures Manual p/n 30A233 for operating instructions

CAUTION:




ONLY USE A "NON-CHLORINE BOIL-OUT COMPOUND!!"

WARNING:



THE DRAIN LEVER MUST BE IN THE "UP" POSITION TO TURN THE COMPUTER "ON"

NOTICE:

 will appear in the Computer display and the Computer will turn the Ultrafryer heat mechanism ON and OFF to heat and maintain the boil-out solution to **190°F (88°C)**.

WARNING:



DO NOT USE THE FILTER PUMP TO REMOVE THE WATER FROM THE VATS AS THIS WILL CAUSE PREMATURE PUMP FAILURE AND VOID THE PUMP WARRANTY

CAUTION:



BOIL-OUT COMPOUND WILL CAUSE SHORTENING TO BREAK DOWN RAPIDLY IF IT IS NOT NEUTRALIZED

**PREVENTATIVE MAINTENANCE
AND TROUBLESHOOTING**

WARNING:



ENSURE REPAIRMEN ARE ADVISED THAT FRYER RESTRAINTS MUST BE DISCONNECTED/CONNECTED IF A FRYER IS TO BE MOVED DURING MAINTENANCE OR REPAIR AND THAT ELECTRICAL POWER AND/OR GAS MUST BE TURNED OFF PRIOR TO PERFORMING ANY MAINTENANCE OR REPAIR.

PREVENTIVE MAINTENANCE

Minimal maintenance is required on a fryer because of its design and materials used in manufacture. However, some preventive maintenance and inspection must be performed periodically to prevent break downs which could curtail food sales. Any preventive maintenance or inspection should be accomplished with **CAUTION** while the fryer is in operation since **HOT** liquid shortening could cause severe burns. If service or repair is required, all electrical power **MUST BE TURNED OFF PRIOR TO** performing that service or repair.

PREVENTIVE MAINTENANCE SCHEDULE

DAILY

<u>ITEM</u>	<u>INSPECT FOR:</u>
Grease Filters	Clean grease filters in the exhaust hood each evening and allow them to dry overnight. Thoroughly clean the filter tub assembly
Filter Tub	ENSURE THE WASH DOWN HOSE IS HUNG IN AN UPRIGHT POSITION (BY ONE END) SO SHORTENING CAN DRAIN INTO A CONTAINER

WEEKLY

Drain Valve Levers	Determine that the pump levers are securely attached to the ball valves, and that the valves can be easily opened and closed.
Drain Hoses	Inspect the suction line hose, wash down hose and if applicable the shortening disposal hose for any evidence of deterioration.
Temperature Sensing Probes	During boil-out of the fryer, inspect the temperature and high limit sensing probes for any visual damage.

TROUBLESHOOTING

A. GENERAL: The problems and possible solutions listed in the troubleshooting chart below are typical Problems that

are frequently encountered. **ONLY** qualified repairmen are to use the troubleshooting chart to repair this fryer. In the event an electrical malfunction occurs, perform the following checks **PRIOR** to contacting a repairman:

1. Ensure high voltage circuit breakers are in their proper position.
2. Check that the fryer electrical plug is connected to an electrical receptacle.
3. Ensure the applicable Circuit Breaker is in the **ON** position and that the Toggle ON/OFF Switch is in the **ON** position, and computer is "Powering Up".

B TROUBLESHOOTING CHART: Should a problem occur that cannot be corrected after performing the above **CHECKS**, contact an authorized repairman and/or Greenfield World Trade (954) 202-7336 and provide the information acquired while performing these checks.

SERVICE AND PARTS

TECHNICAL ASSISTANCE AND PARTS ORDERING INFORMATION

1. TECHNICAL ASSISTANCE

Contact an authorized service agent or the Customer Service Department, Ultrafryer Systems at 1-800-525-8130 for technical assistance.

E-Mail technical assistance at: techserv@ultrafryer.com

2. ORDERING INFORMATION:

- A. **REPLACEMENT PARTS** - Provide the following information when ordering replacement parts by phone, fax or mail:

Your company name and phone number

Your company purchase order number

Bill-to address

Ship-to address

Quantity desired

Part number and description of the desired-item Your name or signature of authorized-buyer

Phone in order to: 954-202-7336

FAX order to: 954-202-7337

Mail order to: Greenfield World Trade

U.S. Office

3355 Enterprise Ave. Suite 160

Ft. Lauderdale, FL 33331

Website: www.Greenfieldworld.com


3. DAMAGES


Ultrafryer Systems is not responsible for damage occurring in transit. All deliveries must be inspected for damage to shipping containers prior to departure of the delivering carrier. Any damage must be stated on the receiving document to facilitate filing of freight claims. Carriers must be notified immediately and freight inspections must be requested from the carrier. Ultrafryer Systems can and will gladly assist you in preparing and processing of the necessary claims only if proper notification has been accomplished on the carrier delivery document. Damaged equipment and or containers must be available for the claims inspector to inspect.

PARTS LIST


ITEM	DESCRIPTION	P/N
1	Computer, Cook U23 Basic Fast Meridian	22A651
2	Cleaning Brush "L" Shaped Tip	29A044
3	Drain Clean Out Rod	22A743
4	Heat Element 208V 8.5KW 14IN	18A012
5	Heat Element 240V 8.5KW 14IN	18A014
6	Heat Element Teflon Washer	18174
7	Heat Element Support Bracket 14IN	19A178
8	3 Pole, 60 Ampree Mechanical Contactor	18A100
9	Temperature Sensing Probe	18A006
10	Step Down Transformer 100VA CZ	22707
11	Micro Switch Crouzet CE	18A064
12	Surge Protector Okaya 3600V	23A148
13	Capacitor 2.2UF Hi Voltage	23A146
14	Hi-Limit Switch - 14"/18"/20" Fryer	19A145
15	Hi-Limit Probe Holder - 14"/18"/20" Fryer	19A788
16	Fuse Holder Assy Type AP-2	23373
17	Buss Type AGC-8 Ampere Fuse	23374
18	Power Cord (Schuko CEE7-7 Type F)	23A303
19	Terminal Block 6 Pole 600V 115A	22544
20	Terminal Block 2 Pole 600V 175A	23A149
21	Pump 5.5 GPM GPV-0519	24339
22	Motor, Pump 230/50/1/CE	17043
23	Vat Grill 13 1/4 x 13 1/4 (337mm x 337mm) - 14" Fryer	22703
24	Basket Hanger Bracket - 14" Fryer	19A492
25	Thermostat, sSap Disc CE	18A315

WIRING DIAGRAMS

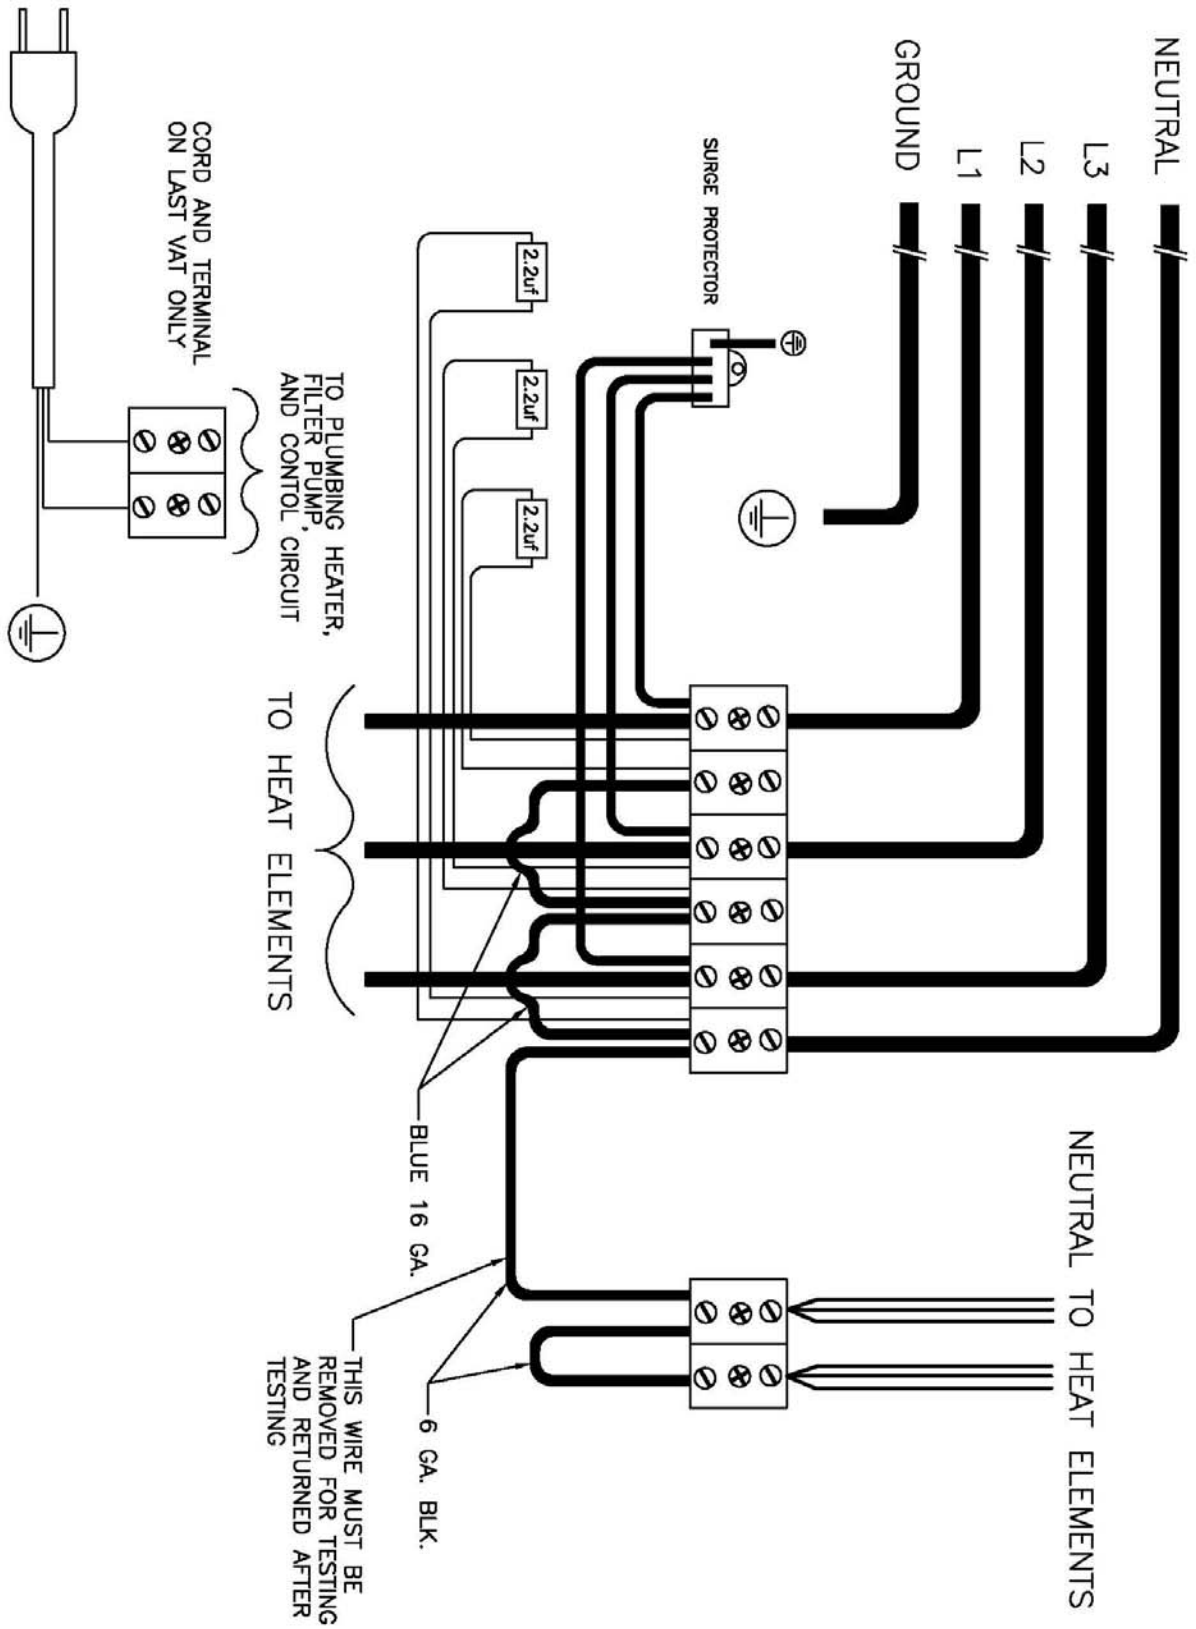

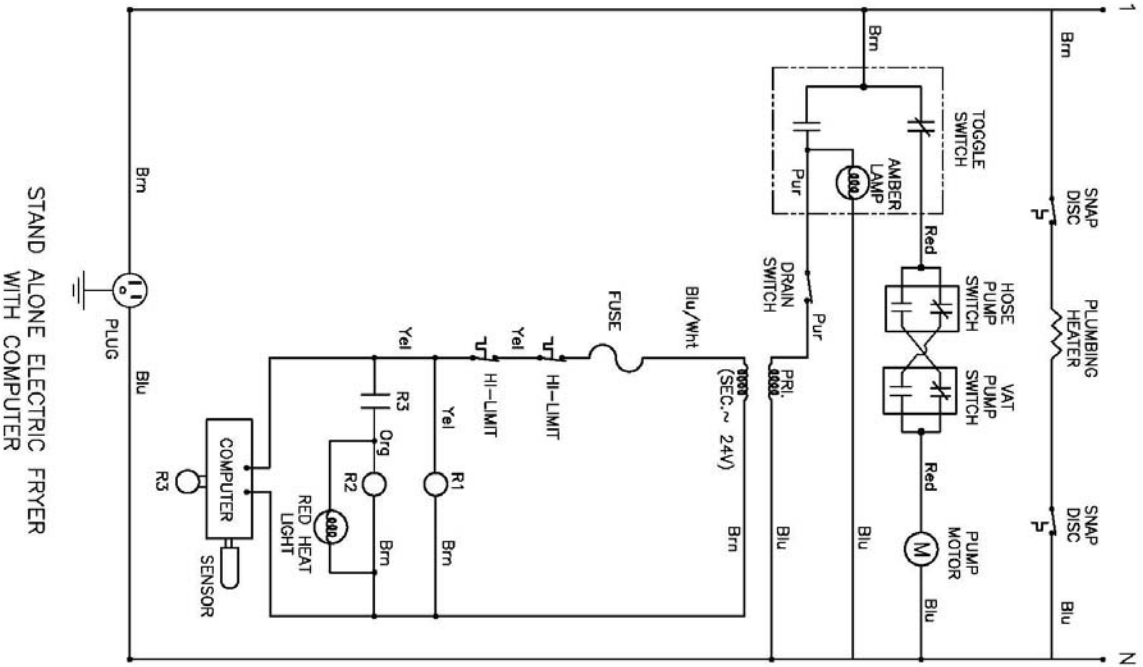

STAND ALONE ELECTRIC FRYER
WITH COMPUTER

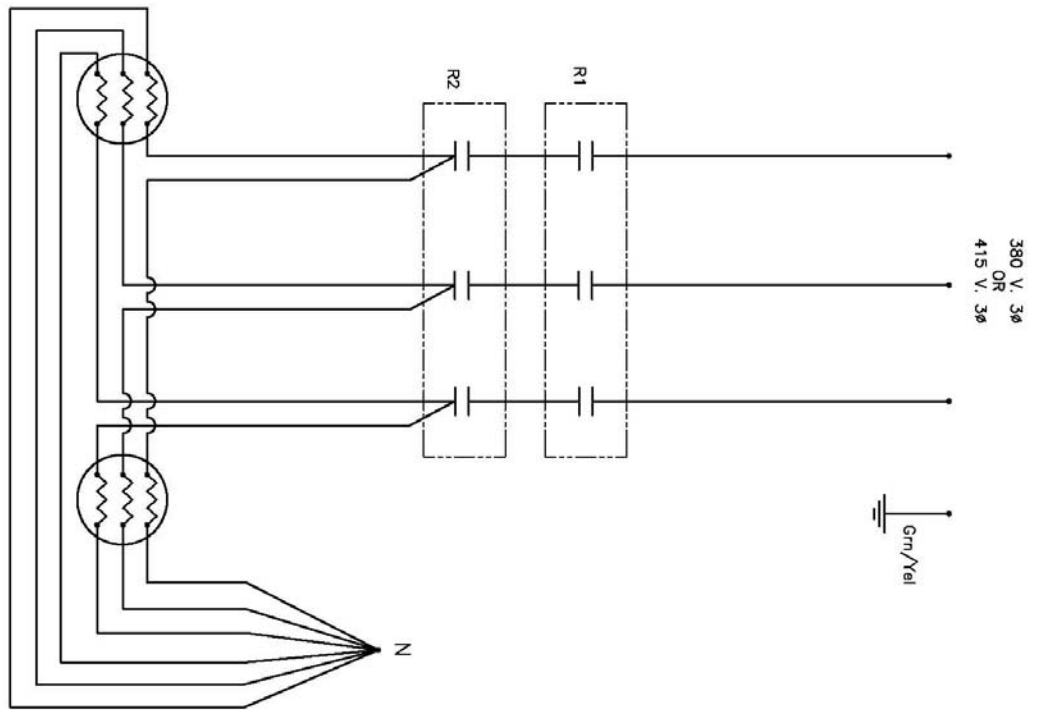

23A452