




TIL 30A258
DATE: 28 Aug 2014

**INSTALLATION INSTRUCTIONS
FOR COLD START CIRCUIT
GAS FRYER**



INSTALLATION INSTRUCTION:


1. Remove power from fryer
2. Pull fryer from wall to access back panel
3. Remove back panel
4. With supplied piggy back connectors, attach pink wire from cold start cable to black existing wire on blower motor relay terminal number 4 (see illustration below)
5. Attach black\white wire to white wire on blower motor relay, terminal number 3. (see illustration-A)

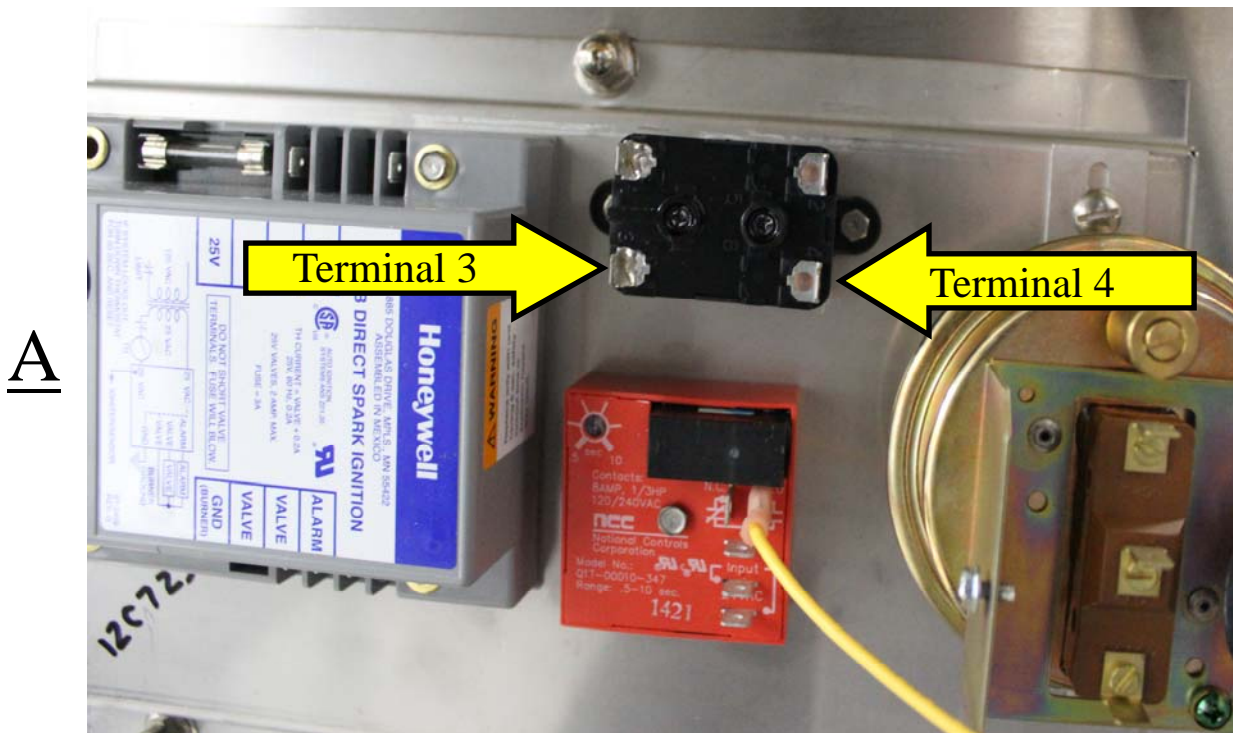

6. Run the cable toward the front of fryer so it can be reached from the front
7. Replace back panel and push fryer back to original position. (Access to back of fryer no longer needed)
8. Open front of fryer and pull cable forward


9. Disconnect 2 pos connector to temp probe (see illustration- B)

B

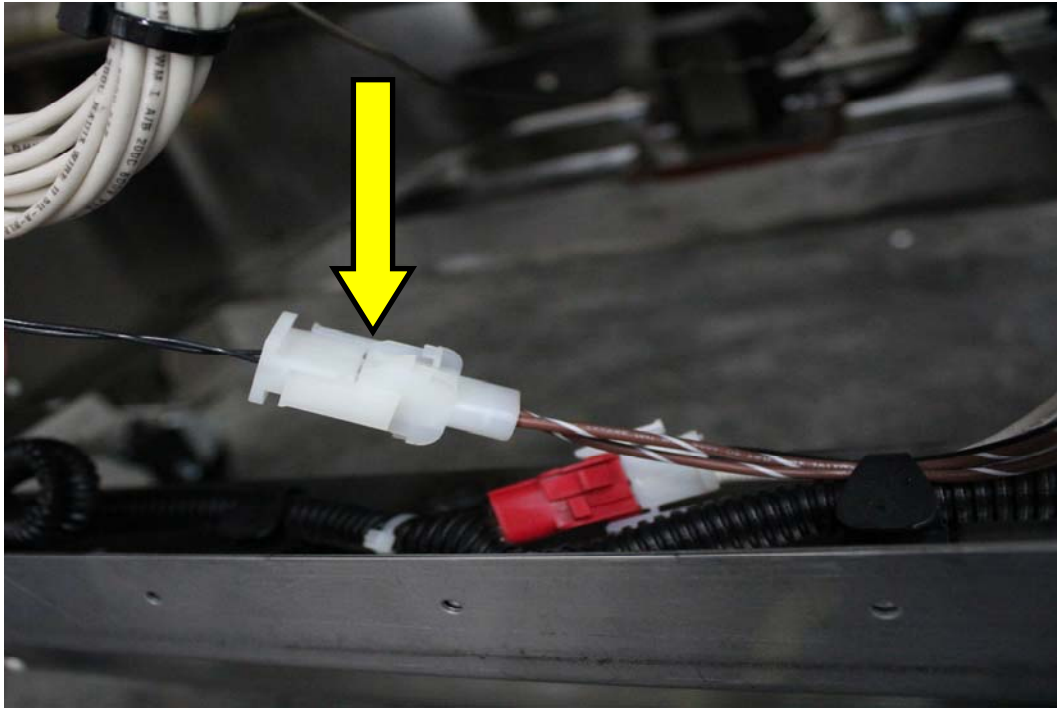

10. Insert short cable 2 pos connectors between existing probe connectors (see illustration-C)

C

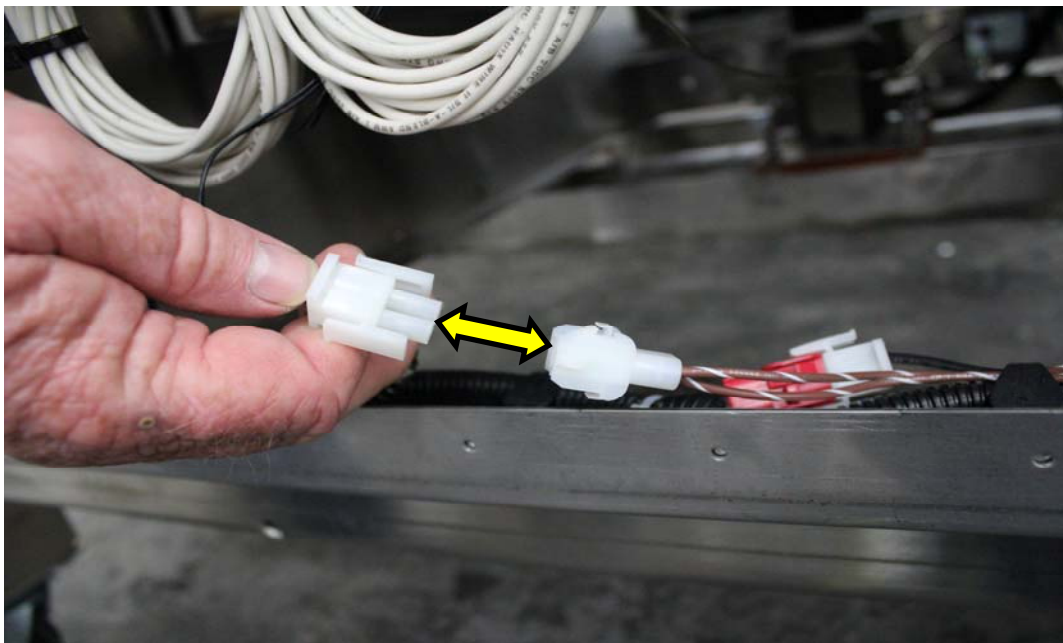

11. Mount switch box on interior cabinet wall so that it is easily accessed and both cables from kit reach to be plugged into back of the cold start switch box (see illustration-D)
12. Secure excess wires as needed to prevent damage
13. Refer to TIL # 30A256 for operating instructions

D

