

ULTRASTAT 25 PROGRAMMING GUIDE



1



Turn **Toggle ON/OFF** switch to **ON** position and **AMBER** power indicator lamp will illuminate.

2



Press **ON/OFF** key. **Melt E, G, or P** will appear in the display.

3



Press the **SET** key. **PROGRAM** will appear in the display.

4



Enter the **COOK PASSWORD "3660"** to program product keys. **RECIPE** will appear in the display. All product key LED's will light.

5



Press the **PRODUCT KEY** to be programmed. i.e. 1-8. Product Key LED will light, indicating ready to be programmed. **NUMBER of STEPS** appears in the display.

6



Enter number of cooking steps to be programmed then press **OK/EXIT** key. The time for cooking 1 to begin will appear in the display indicating **TOTAL COOK TIME**

7



Enter the time the **STEP** is to begin. Then press **OK/EXIT** key. **STRAIGHT/FLEX** will appear in the display.

8



Press the **0 Key** to toggle between **STRAIGHT** or **FLEX** timing mode and press **OK/EXIT**. **STEP TEMP** will appear in display indicating Temp. in "F" for product is to be entered.

9



Enter **TEMP** for this step. Then press **OK/EXIT** key. Repeat instructions 6-9 for each step. When finished with each step **NUMBER OF ALARMS** will appear in the display.

10




Enter number of stir alarms desired. Then press **OK/EXIT**. **ALARM TIME** will be displayed indicating the time for the alarm signal to be entered.

11



Enter the Time the alarm is to begin. Then press the **OK/EXIT** key. **HITS 00** will be displayed. **Enter 00** to finish programming for this product. Then press the **OK/EXIT** key.

12

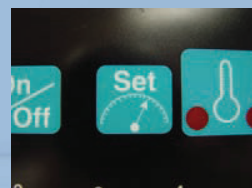

Repeat above steps for each product key to be programmed. Once all product keys are programmed press the **SET** key **TWICE** to exit **PROGRAMMING MODE**.